

Government of Canada

Canadian General Office des normes Standards Board

du Canada

Gouvernement

générales du Canada

# CAN/CGSB-3.0 No. 142.0-2024

Supersedes CAN/CGSB-3.0 No. 142-2019



# Methods of testing petroleum and associated products

Cold soak filter blocking tendency of biodiesel (B100)

Canadian General Standards Board CGSB





ГГ Experience and excellence Expérience et excellence ONGC

#### **Canadian General Standards Board statement**

The CANADIAN GENERAL STANDARDS BOARD (CGSB), under whose auspices this standard has been developed, is a government directorate within Public Services and Procurement Canada. CGSB is engaged in the production of voluntary standards in a wide range of subject areas through the media of standards committees and the consensus process. The standards committees are composed of representatives of relevant interests including producers, consumers and other users, retailers, governments, educational institutions, technical, professional and trade societies, and research and testing organizations. Any given standard is developed on the consensus of views expressed by such representatives.

CGSB has been accredited by the Standards Council of Canada as a national Standards Development Organization. The standards that CGSB develops and offers as National Standards of Canada conform to the requirements and guidance established for this purpose by the Standards Council of Canada. In addition to standards it publishes as National Standards of Canada, CGSB may produce other deliverables that meet particular needs, in response to requests from a variety of sources in both the public and private sectors. CGSB standards and CGSB's National Standards are developed in conformance with the policies described in the CGSB Policy and Procedures Manual for the Development and Maintenance of Standards.

CGSB's standards are subject to review and revision to ensure that they keep abreast of technological progress. CGSB will review and publish this standard on a schedule not to exceed five years from the date of publication. Suggestions for their improvement, which are always welcome, should be brought to the notice of the standards committees concerned. Changes to standards may be issued as amendments or as new editions of standards.

An up-to-date listing of CGSB's standards, including details on latest issues and amendments, is found in the CGSB Catalogue at the following Web site, <u>http://www.tpsgc-pwgsc.gc.ca/ongc-cgsb/index-eng.html</u>, along with more information about CGSB products and services.

Although the intended primary application of this standard is stated in its scope, it is important to note that it remains the responsibility of the users of the standard to judge its suitability for their particular purpose.

The testing and evaluation of a product or service against this standard may require the use of materials and/or equipment that could be hazardous. This standard does not purport to address all the safety aspects associated with its use. Anyone using this standard has the responsibility to consult the appropriate authorities and to establish appropriate health and safety practices in conjunction with any applicable regulatory requirements prior to its use. CGSB neither assumes nor accepts any responsibility for any injury or damage that may occur during or as the result of tests, wherever performed.

Attention is drawn to the possibility that some of the elements of this standard may be the subject of patent rights. CGSB shall not be held responsible for identifying any or all such patent rights. Users of this standard are expressly advised that determination of the validity of any such patent rights is entirely their own responsibility.

For enforcement purposes, standards shall be considered published the final day of the month of their publication date.

#### Contact the Canadian General Standards Board

To obtain information on CGSB, its services and standards or to obtain CGSB publications, please contact us:

web	_	http://www.tpsgc-pwgsc.gc.ca/ongc-cgsb/ index-eng.html
e-mail	_	ncr.cgsb-ongc@tpsgc-pwgsc.gc.ca
telephone	_	1-800-665-2472

mail — Canadian General Standards Board 140 O'Connor Street, Tower East Ottawa, Ontario Canada K1A 0S5

#### Standards Council of Canada statement

A National Standard of Canada is a standard developed by a Standards Council of Canada (SCC) accredited Standards Development Organization, in compliance with requirements and guidance set out by SCC. More information on National Standards of Canada can be found at <u>www.scc.ca</u>.

SCC is a Crown corporation within the portfolio of Innovation, Science and Economic Development (ISED) Canada. With the goal of enhancing Canada's economic competitiveness and social well-being, SCC leads and facilitates the development and use of national and international standards. SCC also coordinates Canadian participation in standards development, and identifies strategies to advance Canadian standardization efforts.

Accreditation services are provided by SCC to various customers, including product certifiers, testing laboratories, and standards development organizations. A list of SCC programs and accredited bodies is publicly available at <u>www.scc.ca</u>.

CAN/CGSB-3.0 No. 142.0-2024

Supersedes CAN/CGSB-3.0 No. 142-2019

# Methods of testing petroleum and associated products Cold soak filter blocking tendency of biodiesel (B100)

CETTE NORME NATIONALE DU CANADA EST DISPONIBLE EN VERSIONS FRANÇAISE ET ANGLAISE.

ICS 75.160.40

Published March 2024 by the Canadian General Standards Board Ottawa, Ontario K1A 0S5

© HIS MAJESTY THE KING IN RIGHT OF CANADA, as represented by the Minister of Public Services and Procurement Canada, the Minister responsible for the Canadian General Standards Board (2024).

No part of this publication may be reproduced in any form without the prior permission of the publisher.

## CANADIAN GENERAL STANDARDS BOARD

## Committee on Fuel Test Methods

## (Voting membership at date of ballot)

#### Chair

Scott Harvie

Co-op Refinery Complex (Producer)

#### **General interest category**

Alberto Villegas Andrew Pickard Aurelian Hanganu Dan Wispinski Glen MacLean Gordon Chiu Hu Wu Lee Marotta Luc Menard Pierre Lévesque Pierre Poitras

## **Producer category**

Andrew Brown Bonnie Sparling Emma Franzmann Gandalf O'Breham Greg Rockwell Kevin Adlaf Ken Mitchell Matthew Barnes Rajesh Gupta Randy Jennings Rhonda Hiscock Stu Porter

#### **Regulator category**

Michelle Raizenne

#### **User category**

Ajae Hall Amanda Prefontaine Michael Kopac

#### Committee manager (non-voting) Astrid Lozano

Canadian General Standards Board

Translation of this National Standard of Canada was conducted by the Government of Canada.

Anton Paar Canada Inc. Consultant (Independent) Bureau Veritas VUV Analytics Intertek Caleb Brett Petroleum Analyzer Company (PAC) AmSpec Services Llc. PerkinElmer CFR Engines Canada ULC SGS Canada Inc. Fuel+Consulting

Irving Oil Ltd. Parkland Refining (BC) Ltd. Suncor Energy Products Partnership Shell Canada Ltd. Imperial Oil Limited Archer Daniels Midland Company Consultant for Canadian Fuels Association Baker Hughes Cenovus Energy Darling Ingredients NARL Logistics LP Consultant for Renewable Industries Canada

Environment and Climate Change Canada

Natural Resources Canada InnoTech Alberta National Defence

# Preface

This National Standard of Canada CAN/CGSB-3.0 No. 142.0-2024 supersedes the 2019 edition.

#### Changes since the previous edition

- Clarified that biodiesel (B100) may contain up to 0.5% by volume middle distillate (4)
- Updated the definition of middle distillate fuel to better include synthetic hydrocarbons (4)
- Removed inaccurate definition of standard isoparaffinic solvent (4)
- Added footnote explaining the requirement to use the specified syringe filters (6.1.5)
- Revised description of temperature measuring device to specify digital or glass thermometer (6.1.7)
- Revised descriptions of baths to clarify that forced air chambers are acceptable (6.1.14, 10.2.1.2, 11.5)
- Relaxed the sulphur maximum for the standard isoparaffinic solvent to 5 mg/kg (Table 1)

The following definitions apply in understanding how to implement this National Standard of Canada:

- "shall" indicates a requirement;
- "should" indicates a recommendation;
- "may" is used to indicate that something is permitted;
- "can" is used to indicate that something is **possible**, for example, that an organization is able to do something.

Notes accompanying clauses do not include requirements or alternative requirements. The purpose of a note accompanying a clause is to separate explanatory or informative material from the text. Annexes are designated normative (mandatory) or informative (non-mandatory) to define their application.

# Table of contents

# Page

1	Scope 1			
2	Normative references			
3	Summary of test method			
4	Terms and definitions2			
5	Interferences			
6	Apparatus			
7	Reagents			
8	Precautions			
9	Apparatus preparation			
10	Sampling and sample preparation7			
11	Procedure			
12	Calculations			
13	Report			
14	Precision and bias			
Annex A (normative) Referenced ASTM International publications				

## <u>Figures</u>

Figure 1 — Flow diagram of filtration test apparatus	. 5
Figure 2 — Whatman Puradisc syringe filter orientation	. 5
Figure 3 — Filter plugging pressure versus volume pumped	10
Table	
Table 1 — Isoparaffinic solvent specifications	. 6

# Methods of testing petroleum and associated products Cold soak filter blocking tendency of biodiesel (B100)

## 1 Scope

This method evaluates the cold soak filter blocking tendency (CSFBT) of biodiesel (B100).

Minor components of some biodiesel esters, including saturated monoglycerides, can separate above the cloud point of a biodiesel fuel blend. The CSFBT test quantifies the propensity of components to separate from a blend of biodiesel and isoparaffinic solvent after a cold soak cycle.

The testing and evaluation of a product against this method may require the use of materials and/or equipment that could be hazardous. This document does not purport to address all the safety aspects associated with its use. Anyone using this method has the responsibility to consult the appropriate authorities and to establish appropriate health and safety practices in conjunction with any applicable regulatory requirements prior to its use.

Units of measurement – Quantities and dimensions used in this standard are provided in units from the International System of Units (SI units) with imperial equivalents shown in brackets (if applicable). This standard expresses the industry standard nominal unit of measurement in North America of "% by volume". The SI equivalent expression for this unit is % (V/V).

## 2 Normative references

The following normative documents contain provisions that, through reference in this text, constitute provisions of this National Standard of Canada. The referenced documents may be obtained from the sources noted below.

Note: The contact information provided below was valid at the date of publication of this standard.

An undated reference is to the latest edition or revision of the reference or document in question, unless otherwise specified by the authority applying this method. A dated reference is to the specified revision or edition of the reference or document in question.

## 2.1 Canadian General Standards Board (CGSB)

CAN/CGSB 3.0 — Methods of testing petroleum and associated products:

No. 28.8 — Visual haze rating of liquid fuels

CAN/CGSB-3.524 — Biodiesel (B100) for blending in middle distillate fuels

#### 2.1.1 Contact information

The above may be obtained from the Canadian General Standards Board. Telephone: 1-800-665-2472. E-mail: <a href="https://www.tpsgc-pwgsc.gc.ca/ongc-cgsb/index-eng.html">ncr.cgsb-ongc@tpsgc-pwgsc.gc.ca</a>. Web site: <a href="https://www.tpsgc-pwgsc.gc.ca/ongc-cgsb/index-eng.html">https://www.tpsgc-pwgsc.gc.ca/ongc-cgsb/index-eng.html</a>.

## 2.2 InnoTech Alberta

2012/2013 Inter-laboratory Study (ILS) for Cold Soak Filter Blocking Tendency Draft C\*\*/CGSB-3.0 No. 142.0

#### 2.2.1 Contact information

The above may be obtained from InnoTech Alberta. Telephone: 780-450-5111. Web site: https://innotechalberta.ca/.

## 2.3 ASTM International

Annual Book of ASTM Standards (see Annex A)

#### 2.3.1 Contact information

The above may be obtained from ASTM International. Telephone: 1-877-909-2786. Web site: <u>https://www.astm.org</u>. It can also be obtained from Standards Store by Accuris. Telephone: 1-800-447-2273. Web site: <u>https://global.ihs.com</u>.

## 3 Summary of test method

**3.1** A sample of biodiesel is first conditioned to erase its thermal history.

**3.2** Then a blend of 20% by volume of this biodiesel sample and a specified isoparaffinic solvent is prepared and held at 1 °C for 16 h.

3.3 The 20% blend is then warmed to 25 °C for 2 to 4 h.

**3.4** After warming, the 20% blend is then passed at a constant flow rate (20 mL/min) through a glass fibre filter medium (1.6 µm pore size).

- a) The pressure drop across the filter is monitored until 300 mL of the 20% blend has passed through the filter, and the maximum pressure drop is used to calculate the CSFBT result; or
- b) If a pressure drop of 105 kPa is reached before 300 mL of the 20% blend is filtered, the volume filtered when 105 kPa is reached is used to calculate the CSFBT result.

**3.5** Results of the CSFBT test can range from 1.0 for a biodiesel with very good filterability (essentially no separated materials under the test conditions), to more than 10 for a fuel with poor filterability (a relatively high level of separated materials under the test conditions).

## 4 Terms and definitions

For the purposes of this method, the following terms and definitions apply.

#### 20% blend

blend of 20% by volume biodiesel with 80% by volume standard isoparaffinic solvent.

#### biodiesel (B100)

mono-alkyl esters of long-chain fatty acids derived from renewable sources. In its neat form, biodiesel is commonly designated as B100. In the context of this test method, the biodiesel is intended as a blending component in a finished diesel fuel or heating oil. The biodiesel may contain up to 0.5% by volume middle distillate.

#### cold soak filter blocking tendency (CSFBT)

dimensionless value that defines the tendency of a biodiesel fuel to plug or block a filter, based on pressure increase or volume filtered. See 12.1 for the equations to calculate the CSFBT number.

#### middle distillate fuel

fuel boiling in the range of 130 °C to 400 °C composed of hydrocarbons and potentially including naturally occurring, petroleum-derived non-hydrocarbons.

## **5** Interferences

Water and inorganic sediment can interfere with the measurement of CSFBT, however biodiesel samples that meet the requirements of CAN/CGSB-3.524 generally will not have interference from water and sediment. High particulate contamination of the biodiesel sample as measured by ASTM D7321 can increase the CSFBT test result. If desired, ASTM D6304 may be used to determine the dissolved water content.

## 6 Apparatus

**6.1** The apparatus is shown as a diagram in Figure 1. It is available as a commercial instrument or may be assembled from the following parts.

#### 6.1.1 Piston pump

A piston pump capable of delivering and maintaining the 20% blend or standard isoparaffinic solvent at a constant flow rate of  $20 \pm 1 \text{ mL/min}$ .

#### 6.1.2 Pulse damper

A mechanism to maintain constant flow of the 20% blend or standard isoparaffinic solvent through the filter up to the maximum pressure of the test (105 kPa).

#### 6.1.3 Pressure gauge

A gauge or equivalent pressure measuring device covering the range from 0 (ambient atmospheric pressure) to 150 kPa with an accuracy of  $\pm$  1 kPa.

#### 6.1.4 Pressure relief valve

A valve used to relieve the pressure if the filter becomes blocked and during verification of the pressure gauge. Set the relief pressure to a minimum of 125 kPa.

#### 6.1.5 Filter unit/media

A glass fibre filter with a nominal pore size of 1.6 µm. Whatman Puradisc 13 mm diameter GF/A glass microfiber syringe filters are required (Part No. 6820-1316 or 6806-1316).<sup>1</sup> Whatman Puradisc syringe filter orientation is shown in Figure 2.

Note: Batch-to-batch variability of filter units may be reduced by the use of Stanhope-Seta certified Whatman Puradisc filters (part No. 91616-00).

#### 6.1.6 Fuel collection container

A container used to collect fuel from the pump outlet.

#### 6.1.7 Temperature measuring device

Digital or glass thermometer with a range that includes 0 to 60 °C and an accuracy of ± 1 °C.

#### 6.1.8 Measuring cylinder (25 mL)

A glass measuring cylinder with a nominal capacity of 25 mL and graduations every 0.5 mL for verifying the flow rate.

<sup>&</sup>lt;sup>1</sup> These syringe filters were used in the development of the method and it is unknown whether other filter units or media would provide equivalent results and precision.

#### 6.1.9 Measuring cylinder (500 mL)

A glass measuring cylinder with a nominal capacity of 500 mL and graduations every 5 mL for verifying the flow rate and measuring the volume of fuel in the fuel collection container.

#### 6.1.10 Filter adaptor

An adaptor is required to connect the tapered side of the filter (see 6.1.5) to the filtration apparatus outlet.

#### 6.1.11 Electrical grounding

#### 6.1.11.1 Ground/bond wire

A 0.912 to 2.59 mm (10 to 19 American wire gauge) bare, stranded, flexible, stainless steel or copper wire installed as described below.

6.1.11.2 The fuel inlet reservoir is placed on a grounded surface for the duration of the test.

**6.1.11.3** The fuel inlet tube is grounded. If the tube is non-conductive, a grounding wire is placed at the tube inlet opening and along the length of the tube until it exits the inlet reservoir (see Figure 1).

**6.1.11.4** The fuel outlet tube is grounded. If the tube is non-conductive, a grounding wire is placed along the tube (see Figure 1).

**6.1.11.5** An electrically grounded wire is used to connect the filter outlet to the bottom of the fuel receiver such that the fuel will flow along the wire (see Figure 1).

#### 6.1.12 Stopwatch

A manual or electronic stopwatch with a nominal accuracy of 1 s is required for verifying the flow rate, sample shaking time, and sample standing time.

#### 6.1.13 Bath (1 °C)

A liquid circulating bath or forced air chamber capable of sustaining a temperature of  $1 \pm 1.0$  °C for at least 16 h and able to accommodate the required number of 500 mL sample containers.

Note: A commercial appliance grade refrigerator is incapable of meeting this requirement.

## 6.1.14 Bath (25 °C)

A liquid circulating bath or forced air chamber capable of sustaining a temperature of  $25 \pm 1.0$  °C for 4 h and able to accommodate the required number of 500 mL sample bottles. The same bath as in 6.1.13 may be used if it meets the requirements of this section.

#### 6.1.15 20% blend fuel inlet reservoir

A 500 mL clear glass bottle (see 6.2) or 500 mL glass beaker.

#### 6.2 Sample container

A 500 mL clear glass bottle with a screw-on cap. The screw-on cap has an inert liner (see 11.1 to 11.5).

**6.2.1** Clear glass containers facilitate a visual inspection of the contents and the container before and after filling. Clear glass containers also allow for visual inspection of the container after the sample is emptied to confirm

complete emptying of the container. The container should be rinsed with approximately 50 mL of the specified isoparaffinic solvent or similarly clean solvent prior to use.

**6.2.1.1** Protect biodiesel samples in clear glass containers from excessive exposure to light, which can lead to photo-induced degradation. Avoid plastic containers from which esters can extract antioxidants or plasticizers.

## 6.3 Filter media for solvent

Nylon filter media with a nominal pore size of 0.45 µm for filtering standard isoparaffinic solvent (see 7.1).


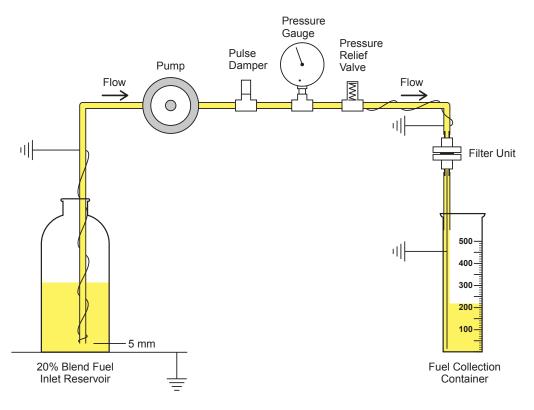


Figure 1 — Flow diagram of filtration test apparatus

Figure 2 — Whatman Puradisc syringe filter orientation

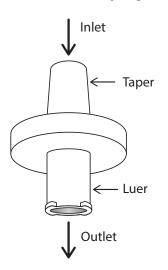

## 7 Reagents

## 7.1 Standard isoparaffinic solvent

An isoparaffinic solvent meeting the specifications in Table 1 is required for this test.

Property	Test method	Minimum	Maximum		
Appearance	CAN/CGSB-3.0 No. 28.8 or ASTM D4176	Clear and bright			
Aromatics, volume %	ASTM D1319 or ASTM D6379		0.25		
Boiling range, °C	ASTM D86	171	210		
Flash point, °C	ASTM D93	43			
Sulphur, mg/kg	ASTM D5453		5		
Water, mg/kg	ASTM D6304, Procedure A	_	105		
Kinematic viscosity at 25 °C, mm <sup>2</sup> /s	ASTM D445	1.5	2.1		
Note: Commercially available solvents known to meet these requirements include Isopar™ K and Isopar™ L.					

Table 1 — Isoparaffi	nic solvent	specifications
----------------------	-------------	----------------

**7.1.1** Filter the solvent at a temperature of 20 to 25 °C through a 0.45 µm nylon filter.

## 8 Precautions

**8.1** Follow the manufacturer's instructions to ensure the filtration apparatus is properly bonded and grounded. Refer to ASTM D4865. As a minimum, the sample inlet and sample outlet shall be grounded.

**8.2** Pressure increases in the apparatus as the test filter becomes plugged. A pressure relief valve is in place. Monitor pressure rise and do not allow pressure to increase beyond that required by the test or the safe limit of the apparatus.

**8.3** Do not test gasoline or lighter distillates that would present a hazard due to their higher volatility and lower flash point (<40 °C).

**8.4** Use appropriate solvent-resistant gloves and minimize exposure by working within a well-ventilated area.

8.5 Use cut-resistant gloves for handling glassware at risk of breaking.

**8.6** Biodiesel soaked cleaning materials such as rags can spontaneously combust. Take appropriate precautions for the timely and safe disposal of such waste material. This includes washing rags with soap and water and drying in a ventilated area before disposal.

## 9 Apparatus preparation

## 9.1 **Pressure and temperature**

Verify the pressure gauge reading at 0 kPa (ambient atmospheric pressure) and 100 kPa at least every six months. Verify the temperature measuring device for the baths at 25 °C and at 0 °C at least once a year.

#### 9.2 Flow rate and system pressure check

Verify monthly that the flow rate is  $20 \pm 1$  mL/min through a filter assembly installed according to 11.7, measuring the volume of standard isoparaffinic solvent pumped and recording the pressure at 20 s, 60 s, and then after every 60 s during a 15-minute period. The measured volume should be between 285 and 315 mL. The pressure should be 5  $\pm$  2 kPa. Flow rate may be checked more frequently by measuring the volume pumped during a 1-minute period. In this case, the volume should be between 19 and 21 mL. Adjust the flow control on the pump following manufacturer's instructions if flow rate checks are outside  $20 \pm 1$  mL/min.

## 9.3 Apparatus assembly

Assemble the apparatus as shown in Figure 1 without the filter unit connected.

## **10** Sampling and sample preparation

**10.1** The sample shall be obtained in accordance with practices described in ASTM D4057, ASTM D4177 or equivalent site-specific practices.

**10.1.1** Precautions to avoid sample contamination shall include selection of an appropriate sampling point. It is preferable to obtain samples dynamically from a sampling loop in a distribution line, or from the flushing line of a field sampling kit. Ensure that the line to be sampled is flushed with product before collecting the biodiesel sample.

**10.1.2** Use clean sample containers that are impervious to biodiesel. Flush the containers three times with the product to be sampled before collecting the sample.

**10.1.3** Do not transfer the fuel sample from its original sample container into an intermediate storage container. If the original sample container is damaged or leaking, obtain a new sample.

**10.1.4** Where it is desirable or only possible to obtain samples from static storage, follow the procedures given in ASTM D4057 or equivalent, taking precautions for cleanliness of all equipment used. The sample should pass through a minimum number of intermediate containers prior to placement in the prepared container.

**10.1.5** Samples obtained from static storage can give results that are not representative of the bulk contents of the tank because of particulate matter settling. Where possible, the contents of the tank should be circulated or agitated before sampling, or the sampling should be performed shortly after a tank has been filled.

**10.1.6** If any free water is visually apparent (as may be determined by test methods ASTM D4176 or CAN/CGSB-3.0 No. 28.8), discard the sample and replace it with fresh sample.

**10.1.7** Where possible, store the biodiesel sample under an inert atmosphere.

## **10.2 Removal of thermal history**

**10.2.1** Heat the entire biodiesel sample, preferably under an inert atmosphere, to 60 °C for 3 h before analysis to remove all thermal history and ensure that any separated materials are dissolved in the sample.

Note: Ruggedness testing by several laboratories has shown that sample conditioning all biodiesel according to 10.2.1 minimized discrepancies in results.

**10.2.1.1** To minimize degradation, do not heat the biodiesel unnecessarily, especially if the sample cannot be placed under an inert atmosphere.

**10.2.1.2** After heating at 60 °C for 3 h, allow the biodiesel to cool down to  $24 \pm 4$  °C. A bath at 20 to 25 °C may be used.

**10.2.2** This sample conditioning step (see 10.2.1) may be omitted if the biodiesel sample was collected from a heated tank at a production facility and has not been cooled below 20 °C.

**10.2.3** If there is any uncertainty about the thermal history of the biodiesel sample, the sample conditioning step (see 10.2.1) shall be performed.

## 11 Procedure

**11.1** Shake the biodiesel vigorously for one minute. Aliquot 70 mL into a 500 mL clear glass container (see 6.2) and heat the container in an oven or bath at 60 °C for 45 min. Allow the aliquot to cool to  $24 \pm 4$  °C.

**11.1.1** The heating step is intended to dissolve separated materials that form in the biodiesel at room temperature. It may be omitted within 10 h of performing step 10.2.1 or within 10 h after collection from a heated tank at a production facility. In either case, if the biodiesel has been cooled below 20 °C, repeat 10.2.1 before starting the procedure.

**11.2** Add 280 mL of standard isoparaffinic solvent (see 7.1) to the 70 mL of biodiesel to make a 20% blend by volume of biodiesel and 80% by volume standard isoparaffinic solvent. Ensure a homogeneous solution by mixing.

**11.3** Put the container in a bath at  $1 \pm 1$  °C for  $16 \pm 1$  h.

**11.4** Remove the 20% blend from the bath. If any free (undissolved) water is apparent in the fuel at this stage, abandon the test and report the presence of water.

**11.5** Swirl gently and place the 20% blend in a bath at  $25 \pm 1$  °C for  $2 \pm 0.25$  h. Alternatively the same bath may be used if the setting is changed to 25 °C immediately after swirling. If the 20% blend contains any solids or haze after the 2-hour warming period, shake vigorously for 20 ± 10 s and continue warming for an additional 2 h. If solids or haze are still visible after a total of 4-hour warming, then report "solids or haze visible" and continue with the test.

**11.5.1** Remove the 20% blend from the 25  $\pm$  1 °C bath and perform the rest of section 11 as soon as possible and within 2 h.

**11.5.2** Shake the 20% blend vigorously for  $60 \pm 10$  s and pour it into the blend fuel inlet reservoir (see 6.1.15). Alternatively, the bottle used for the cold soak conditioning may be used as the inlet reservoir. Place the reservoir on an electrically grounded surface for the remainder of the test.

**11.6** Place the pump suction pipe into the 20% blend such that the opening is approximately 5 mm above the bottom of the pump inlet reservoir. Allow the sample to stand on a vibration free surface for  $120 \pm 15$  s prior to filtration. Run the pump without the filter attached until the 20% blend flows into the collection container. Collect approximately 20 mL of 20% blend. Stop the pump and discard any fuel from the collection container. Ensure there is no air in the lines prior to attaching the filter unit.

**11.7** Attach the tapered end of the filter unit to the adaptor (see 6.1.10) on the system.

**11.7.1** Restart the pump and start the timer.

Note: An adaptor constructed with flexible material, such as plastic tubing or a Luer adaptor, is prone to deformation or cracking after repeated use. Change these components frequently and ensure a proper pressure seal is made, such as by performing the leak test (see 11.10).

**11.8** Record the pressure after 20 s. The pressure shall be equal to or greater than the system pressure check (see 9.2). A lower pressure could be due to a leak in the filter media. Record the pressure after 60 s and thereafter every 60 s until the end of the test<sup>2</sup>. If the pressure rises to 105 kPa, stop the pump immediately. Do not allow additional sample to flow into the collection container, as that could affect the volume result. Measure and record the volume collected, rounding off the figure to the nearest 10 mL.

**11.9** If 300 mL of 20% blend has been pumped without the pressure reaching 105 kPa, stop the pump. Record the maximum pressure reached to at least the nearest 5 kPa.

**11.10** If the graph in 12.2 indicates an abnormal curve (see 12.2.2), then before dismantling and cleaning, check for leaks within the system as follows.

**11.10.1** Do not remove the filter unit used in the test from the system.

**11.10.2** Plug the outlet of the filter, and pump liquid until a pressure of approximately 105 kPa is reached.

**11.10.3** Turn off the pump and observe the pressure for 30 s. The pressure should not drop more than 3 kPa.

**11.11** Pump at least 50 mL of filtered standard isoparaffinic solvent (see 7.1) through the lines of the filter plugging apparatus to remove contamination that could cause plugging on the next sample.

**11.12** Apparatus cleanliness and restrictiveness can be checked by attaching a filter as described in 11.7 and running the pump with standard isoparaffinic solvent. The pressure should be within the system pressure check value (see 9.2).

## 12 Calculations

**12.1** Calculate the CSFBT by either of the following equations:

 $CSFBT = \sqrt{1 + (P/105)^2}$  1) when 300 mL of the 20% blend has passed through the filter and the pressure did not reach 105 kPa;

 $CSFBT = \sqrt{1 + (300 / V)^2}$  2) when the pressure reached 105 kPa and the test was discontinued;

where:

*P* is the maximum pressure (kPa) measured when 300 mL of 20% blend passes through the filter;

V is the volume (mL) of 20% blend passed through the filter when the pressure reaches 105 kPa.

**12.2** For CSFBT results greater than or equal to 1.07 ( $\geq$  40 kPa maximum pressure), plot the pressure versus volume pumped (see 11.8) on a graph similar to that in Figure 3.

**12.2.1** The points should fall along a smooth, increasing curve with constant or increasing slope (see Figure 3).

**12.2.2** A plateau or drop in pressure, especially at or above 40 kPa, could indicate a leak in the system or filter breakthrough. If observed, verify the instrument is working properly (see 11.10).

<sup>&</sup>lt;sup>2</sup> Automated data collection may be suitable for this step.

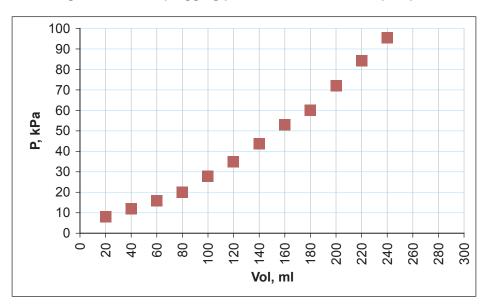


Figure 3 — Filter plugging pressure versus volume pumped

## 13 Report

- **13.1** Report the results of the test in one of the following forms, referencing this test method.
- 13.1.1 If free water is found (see 11.4), report "Free (undissolved) water present, test not performed".
- **13.1.2** Otherwise, report the CSFBT result as follows:
- a) CSFBT to the nearest 0.1 as calculated in 12.1;
- b) maximum pressure (*P*) rounded to the nearest 5 kPa or volume of 20% blend (*V*) rounded to the nearest 10 mL (see 12.1);
- c) if solids or haze were visible after 4 h of warming (see 11.5), report "solids or haze visible".

## 14 Precision and bias

**14.1** The precision of the method was developed in a 2012 interlaboratory test program involving 13 laboratories and ten test samples (see 2.2). Each sample was analyzed twice. Commercial and site-assembled instrument types were used. Repeatability and reproducibility for all instruments as one group were analyzed in accordance with ASTM D6300. Precision and bias between instrument types were analyzed in accordance with ASTM D6708.

14.1.1 One set of sample data was excluded due to essentially zero variation from 1.0 CSFBT.<sup>3</sup>

#### 14.1.2 Repeatability

Duplicate results by the same operator should be considered suspect if they differ by more than the amount given by the equation (r) =  $0.284^{*}(X)^{1.67}$ , which is valid over the range >1.0 to 3.5, where X = CSFBT result.

<sup>&</sup>lt;sup>3</sup> One sample gave results of 1.0 by all laboratories, so there was no variation, and current statistical treatment of interlaboratory test data requires some variation. This data set was excluded because it gave excellent, unvarying results, not because it was poor or suspect data.

#### 14.1.3 Reproducibility

Results submitted by each of two laboratories should be considered suspect if they differ by more than the amount given by the equation (R) =  $0.49^{*}(X)^{1.67}$ , which is valid over the range >1.0 to 3.5, where X = CSFBT result.

#### 14.1.4 Agreement between instrument types

There was no statistically distinguishable difference in precision performance between the commercial and site-assembled instrument types. There was a small but distinguishable constant bias between the two types, with the commercial type higher by an average of 0.17 CSFBT.

# Annex A

(normative)

# **Referenced ASTM International publications** (see 2.3)

## A.1 Annual Book of ASTM Standards

ASTM D86 — Standard Test Method for Distillation of Petroleum Products and Liquid Fuels at Atmospheric Pressure

ASTM D93 — Standard Test Methods for Flash Point by Pensky-Martens Closed Cup Tester

ASTM D445 — Standard Test Method for Kinematic Viscosity of Transparent and Opaque Liquids (and Calculation of Dynamic Viscosity)

ASTM D1319 — Standard Test Method for Hydrocarbon Types in Liquid Petroleum Products by Fluorescent Indicator Adsorption

ASTM D4057 — Standard Practice for Manual Sampling of Petroleum and Petroleum Products

ASTM D4176 — Standard Test Method for Free Water and Particulate Contamination in Distillate Fuels (Visual Inspection Procedures)

ASTM D4177 — Standard Practice for Automatic Sampling of Petroleum and Petroleum Products

ASTM D4865 — Standard Guide for Generation and Dissipation of Static Electricity in Petroleum Fuel Systems

ASTM D5453 — Standard Test Method for Determination of Total Sulfur in Light Hydrocarbons, Spark Ignition Engine Fuel, Diesel Engine Fuel, and Engine Oil by Ultraviolet Fluorescence

ASTM D6300 — Standard Practice for Determination of Precision and Bias Data for Use in Test Methods for Petroleum Products, Liquid Fuels, and Lubricants

ASTM D6304 — Standard Test Method for Determination of Water in Petroleum Products, Lubricating Oils, and Additives by Coulometric Karl Fischer Titration

ASTM D6379 — Standard Test Method for Determination of Aromatic Hydrocarbon Types in Aviation Fuels and Petroleum Distillates — High Performance Liquid Chromatography Method with Refractive Index Detection

ASTM D6708 — Standard Practice for Statistical Assessment and Improvement of Expected Agreement Between Two Test Methods that Purport to Measure the Same Property of a Material

ASTM D7321 — Standard Test Method for Particulate Contamination of Biodiesel B100 Blend Stock Biodiesel Esters and Biodiesel Blends by Laboratory Filtration